



# Fitting instructions

## Fitting HIAC Recessed Access Cover

(HIAC covers are generally supplied with gas springs removed for re-fitting after installation).

**1**

Check size of structural opening and recessed dimensions against overall frame sizes to determine packing/grout requirements to ensure top of frame will be flush with F.F.L.

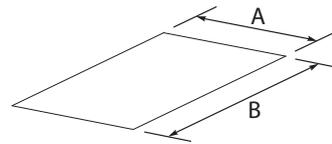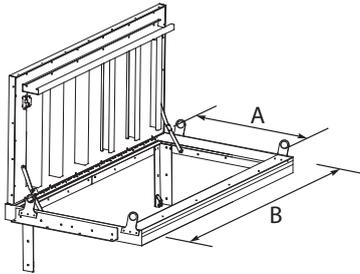

**2**


Ensure bottom of structural recess has suitable packing/grout.

**3**

Using slings if necessary lower access cover into recess or if fitted the lifting points supplied.



**4**

Check top of frame is flush with F.F.L. and frame is not twisted.

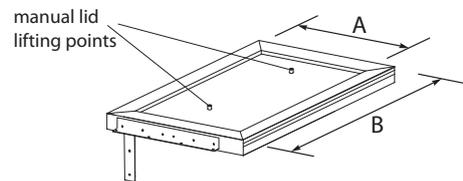

**5**

Check gas spring bracket(s) or motors are flush with the inside of the hole. Pack if necessary. It is critical that the gas spring brackets are vertical and solid against the inside of the opening.

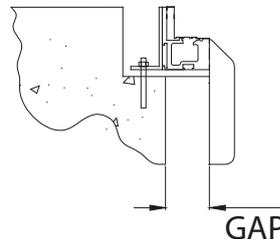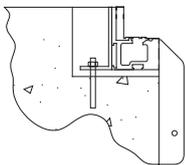

**6**

Fit frame into position. Remove any slings or lifting points as appropriate. Back fill as required and allow to set. Do not get grout inside the outer frame and inner frame, this will effect the opening of the unit later. Use masking tape around the top of the frame to stop grout impeding.